


Pressure Reducing & Sustaining Valve Normally Closed with Hydraulic Control

(Sizes 1.5" - 4"; DN40-100)

Description:

The BERMAD Model IR-423-54-KX is a hydraulically Operated, diaphragm actuated control valve that sustains Minimum preset upstream (back) pressure and reduces Downstream pressure to a constant preset maximum. It is a Normally Closed valve, which opens in response to a Remote pressure rise command and shuts in the absence of that command.

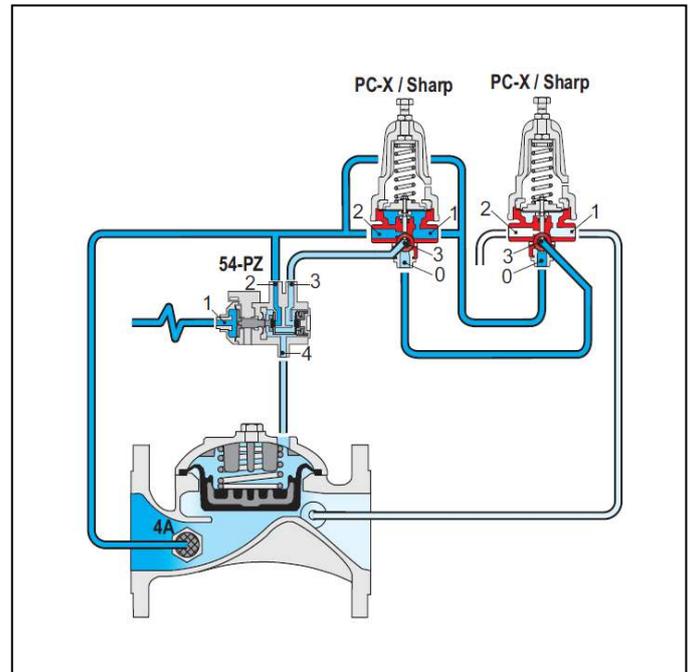

Installation:

1. Ensure enough space around the valve assembly for future maintenance and adjustments.
2. Prior to valve installation, flush the pipeline to insure flow of clean fluid through the valve.
3. For future maintenance, install Isolation gate valves upstream and downstream from Bermad control valve.
4. Install the valve in the pipeline with the valve flow direction arrow in the actual flow direction.
5. For best performance, it is recommended to install the valve horizontally and upright.
6. After installation carefully inspect/correct any damaged accessories, piping, tubing, or fittings.
7. Connect the hydraulic relay (54-PZ) to the controller.

Commissioning & Calibration:

1. Confirm that the In-line filter arrow [4A] direction is in the valve flow direction.
2. Allow the valve to start regulation by using the hydraulic relay (54-PZ) manual override, or by hydraulic pressure command.
3. Open fully the upstream isolating valve and slowly open the downstream isolating valve, to fill-up, carefully, the consumers' line downstream from the Valve.
4. Vent air from the valve's control loop by loosening cover tube fitting at the highest point, allowing all air to bleed. Then Retighten the tube fitting.
5. The IR-423-54-KX is factory set according to the design. The set pressure is marked on the pilots labels
 - 5.1. Pressure Sustaining Pilot [PSP]: the pilot with port 1&2 connected to the valve upstream.
 - 5.2. Pressure reducing Pilot [PRP]: the pilot with port 2 vented-
6. If the set pressure is either different from the design or the requirements have been changed, change settings according to the following:
 - 6.1. Unlock the PRP locking nut and slowly turn the pilot adjusting screw Clock-Wise to increase set pressure and Counter Clock-Wise to decrease it. Allow the 423-54-KX to react and the downstream pressure to stabilize.
 - 6.2. Close the upstream isolating valve to reduce 423-54-KX- inlet pressures. Ensure that the 423-54-KX sustains the upstream pressure, preventing it from decreasing below setting, even when the upstream isolating valve is almost closed.
 - 6.3. Unlock the PSP locking nut and slowly turn the pilot adjusting screw Clock-Wise to increase set pressure and Counter Clock-Wise to decrease it. Allow the 423-54-KX to react and the upstream pressure to stabilize.
 - 6.4. After the pressure is stabilized, lock the pilots locking nut and open fully the upstream isolating valve.

Trouble-Shooting:

Symptoms	Cause	Remedy
Valve fails to open	<ol style="list-style-type: none"> 1. Hydraulic control command. 2. Not sufficient inlet pressure- 3. Not sufficient flow. 4. Adjusting screws. 	<ol style="list-style-type: none"> 1. Check existence of hydraulic pressure command in the hydraulic relay. 2. Check for sufficient inlet pressure- 3. Create demand/flow, confirm pilot setting- 4. Check that the PRP adjusting screw- Is not loose and that the PSP adjusting screw is not too tighten-
Valve fails to close	<ol style="list-style-type: none"> 1. Hydraulic control command. 2. Control circuit is clogged. 3. Debris- 4. Diaphragm- 	<ol style="list-style-type: none"> 1. Check no existence of hydraulic pressure command in the hydraulic relay. 2. Check for any debris trapped in the valve control circuit. 3. Check for any debris trapped in the valve body. 4. Check diaphragm is not leaking-
Valve fails to regulate	<ol style="list-style-type: none"> 1. Not sufficient inlet pressure. 2. Not sufficient flow. 3. Pilots setting- 4. Air trapped in the control chamber- 	<ol style="list-style-type: none"> 1. Check for sufficient inlet pressure. 2. Create demand/flow, confirm pilot setting. 3. Check PRP and PSP Pilot's setting- 4. Release air trapped in the control chamber by loosening cover tube fitting at the highest point.

Preventive Maintenance:

1. System operating conditions that effect on the valve should be checked periodically to determent the required preventative maintenance schedule.
2. Maintenance instructions:
 - 2.1. Tools required:
 - 2.1.1. Metric and imperial wrenches
 - 2.1.2. Anti-seize grease
 - 2.1.3. Visual inspection to locate leaks and external damages
 - 2.2. Functional inspection including: closing, opening and regulation.
 - 2.3. Close upstream and downstream isolating valves (and external operating pressure when used)
 - 2.4. Once the valve is fully isolated vent pressure by loosening a plug or a fitting.
 - 2.5. Open the screw nuts and remove the cover unit from the valve body. Disassemble necessary control tubs.
 - 2.6. It is highly recommended to stock a reserve parts assembly for each size. This allows minimum system field work.
And system down time.
 - 2.7. Disassemble the cover and examine the inside parts carefully for signs of wear, corrosion, or any other abnormal conditions.
 - 2.8. Replace worn parts and all the Elastomers. Lubricate the bolts and screws threads with Anti seize grease.
 - 2.9. Winterizing /freezing prevention: drain the valve & the valve accessories (pilot, solenoid) on time.

Spare Parts

Bermad has a convenient and easy to use ordering guide for valve spare-parts and control system components.
For solenoid valves refer to model and S/N on solenoid tags.

Pub # : IOMIR-423-54-KX-1.5" -4"	By : YG 5/12	Rev: YG 5/12	File name : IOMIR-423-54-KX-1.5"-4"- 5/12	PT1AE08-01
----------------------------------	--------------	--------------	---	------------