


## Hydrometer Magnetic Drive with solenoid control (Sizes 6" - 10"; DN150-250)

### Description:

The BERMAD Hydrometer with Solenoid Control integrates a Vertical turbine Woltman-type water meter with a diaphragm actuated hydraulic control valve. The impeller drive is magnetically coupled to a vacuum-sealed meter register in the control head. As the system's Flow Meter and Main Valve, it controls system irrigation together with the irrigation controller. The BERMAD Model IR-910-M0-RX opens and Shuts in response to an electric signal.

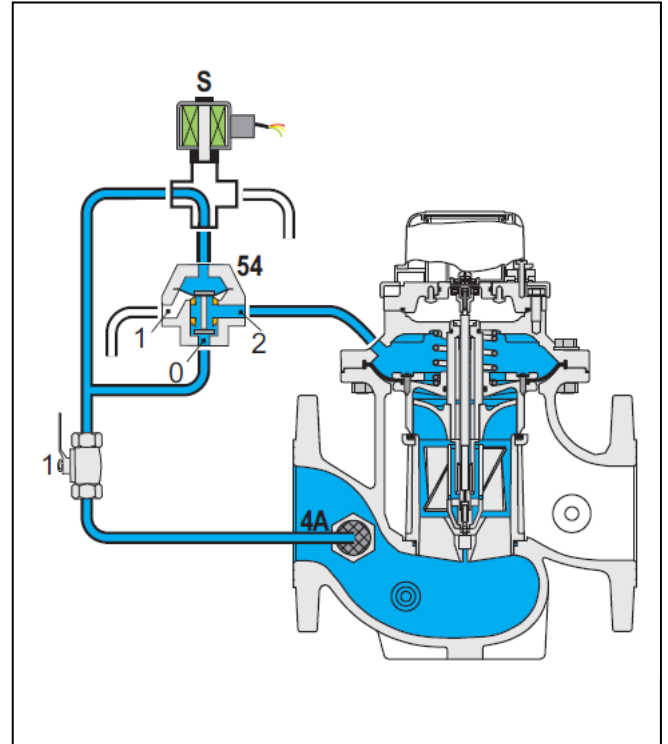

### Installation:

1. Ensure enough space around the valve assembly for future maintenance and adjustments.
2. Prior to valve installation, flush the pipeline to insure flow of clean fluid through the valve.
3. For future maintenance, install Isolation gate valves upstream & downstream from Bermad control valve.
4. Install the valve in the pipeline with the valve flow direction arrow in the actual flow direction.
5. For best performance, it is recommended to install the valve horizontally and upright.
6. After installation carefully inspect/correct any damaged accessories, piping, tubing, or fittings.
7. Cross-Check solenoid specifications with design requirements and solenoid/coil label.
8. Ensure approved cable protection. Confirm that the wires data meet solenoid specifications.  
**Note:** Energizing the solenoid coil when it is not fixed in its place, is dangerous & might burn the coil.
9. It is highly recommended to install a strainer Bermad model 70F upstream from the pressure reducing hydrometer, to prevent debris from damaging valve operation.

### Commissioning & Calibration:

1. Confirm that the In-line filter arrow [4A] direction is in the valve flow direction.
2. Confirm that cock valve (1) is open (handle is parallel to valve body).
3. Allow the valve to open by using the solenoid manual override or by: Operating the solenoid.
4. Open fully the upstream isolating valve and slowly open the downstream isolating valve, to fill-up, carefully, the consumers' line downstream from the Valve.
5. Vent air from the valve's control loop by loosening cover tube fitting at the highest point, allowing all air to bleed. Then  
Retighten the tube fitting.
6. Check valve solenoid control feature by De-Energizing & Energizing the solenoid to close & open the valve.

## Trouble-Shooting:

Symptoms	Cause	Remedy
<b>Valve fails to open</b>	1. Not sufficient inlet pressure. 2. Not sufficient flow. 3. Solenoid functioning	1. Check for sufficient inlet pressure- 2. Create demand/flow. 3. Check solenoid power supply, coil & Manual Override Handle position
<b>Valve fails to close</b>	1. Cock valve (1) position. 2. Control circuit is clogged. 3. Debris- 4. Diaphragm- 5. Solenoid functioning	1. Confirm that cock valve handle is parallel to valve body. 2. Check for any debris trapped in the valve control circuit. 3. Check for any debris trapped in the valve body. 4. Check diaphragm is not leaking- 5. Check solenoid power supply, coil & Manual Override Handle position.

## Preventive Maintenance:

1. System operating conditions that effect on the valve should be checked periodically to determent the required preventative maintenance schedule.
2. Maintenance instructions:
  - 2.1. Tools required:
    - 2.1.1. Metric and imperial wrenches
    - 2.1.2. Anti-seize grease
    - 2.1.3. Visual inspection to locate leaks and external damages
  - 2.2. Functional inspection including: closing, opening and regulation.
  - 2.3. Close upstream and downstream isolating valves (and external operating pressure when used)
  - 2.4. Once the valve is fully isolated vent pressure by loosening a plug or a fitting.
  - 2.5. Open the screw nuts and remove the cover unit from the valve body. Disassemble necessary control tubs.
  - 2.6. It is highly recommended to stock a reserve parts assembly for each size. This allows minimum system field work. And system down time.
  - 2.7. Disassemble the cover and examine the inside parts carefully for signs of wear, corrosion, or any other abnormal conditions.
  - 2.8. Replace worn parts and all the Elastomers. Lubricate the bolts and screws threads with Anti seize grease.
  - 2.9. Winterizing /freezing prevention: drain the valve & the valve accessories (pilot, solenoid) on time.

## Spare Parts

Bermad has a convenient and easy to use ordering guide for valve spare-parts and control system components. For solenoid valves refer to model and S/N on solenoid tags.