BERMAD Irrigation



Pressure Relief/Sustaining Valve

IR-430

The BERMAD Model IR-430 Pressure Relief/Sustaining Valve is a hydraulically operated, diaphragm actuated control valve that can fulfill either of two separate functions. When installed in-line, it sustains minimum preset upstream (back) pressure regardless of fluctuating flow or varying downstream pressure. When installed as a relief or circulation valve, it relieves line pressure in excess of preset.




Pressure Sustaining Valve

Features and Benefits


- Line Pressure Driven Pressure Relief/Sustaining Valve
 Controls system fill-up
 - Sustains upstream line pressure
 - Relieves excessive pressure protecting pump and system
 - Prioritizes pressure zones
- Advanced Globe Hydro-Efficient Design
 - Unobstructed flow path
 - Single moving part
 - High flow capacity
- Fully Supported & Balanced Diaphragm
 - Requires low opening and actuation pressure
 - Excellent low flow regulation performance
 - Progressively restrains valve closing
 - Prevents diaphragm distortion
- User Friendly Design
 - Easy pressure setting
 - Simple in-line inspection and service

Typical Applications

- Downhill Supply Lines Emptying Prevention
- Pressure Zone Prioritizing
- Line Fill-Up Control
- Pump Overload and Cavitation Protection
- Pump Minimum Flow Safeguard
- Excessive Line Pressure Protection

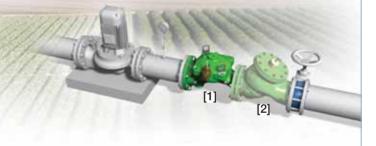

Circulation / Relief Valve

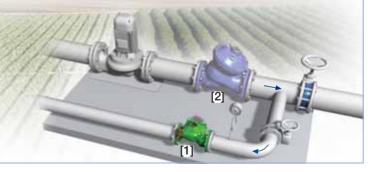

Pressure Sustaining Valve

- [1] BERMAD Model IR-430 protects pump from overload and cavitation, prevents main line emptying, and controls system fill-up.
- [2] BERMAD Check Valve Model 70N

Circulation / Relief Valve

- [1] BERMAD Model IR-430 safeguards pump minimum flow and relieves excessive line pressure.
- [2] BERMAD Active Check Valve Model 740Q



BERMAD Irrigation


IR-430

For full technical details, refer to Engineering Section.

Technical Specifications

Dimensions and Weights

Size	DN Inch	80 3	100 4	150 6	200 8	250 10	300 12	350 14	400 16
L	mm	250	320	415	500	605	725	742	742
	inch	9.8	12.6	16.3	19.8	23.8	28.5	29.2	29.2
н	mm	210	242	345	430	460	635	655	965
	inch	8.3	9.5	13.6	16.9	18.1	25	25.8	38
с	mm	125	145	207	258	276	381	393	579
	inch	5	5.7	8.2	10.2	10.9	15	15.5	22.8
R	mm	100	112	140	170	202	242	260	300
	inch	3.9	4.4	5.5	6.7	8	9.5	10.2	11.8
A; B	mm	300	312	353	383	403	490	494	500
	inch	11.8	12.3	13.9	15.1	15.9	19.3	19.4	19.7
Weight	Kg	19	28	68	125	140	290	358	377
	lb.	41.9	61.7	149.9	275.6	308.6	639.3	789.2	831.1

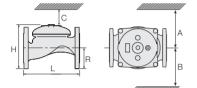

Technical Data

Patterns and Sizes: Globe: 3-16"; DN80-400 Angle: 3-4"; DN80-100 **End Connections:**

Cinc.		3"	4"	6"	8-16"
Size		DN80	DN100	DN150	DN200-400
Threaded	Globe	=			
Inreaded	Angle	-			
Flanged	Globe	-	•	•	
	Angle	-	=		
Omenand	Globe	-		•	
Grooved	Angle		-		

Pressure Ratings: 16 bar; 232 psi

Operating Pressure Range: 0.5-16 bar; 7-232 psi For lower pressure requirements, consult factory Setting Range: 1.5-16 bar; 22-232 psi Setting ranges vary according to specific pilot spring. Please consult factory.


Materials:

Body and Cover:

Polyester Coated Cast or (10"; DN250 and larger) Ductile Iron Spring: Stainless Steel Diaphragm: Nylon fabric Reinforced NR with rugged insert Bolts, Studs and Nuts: Zinc-Cobalt plated Steel Control Accessories: Brass Tubing and Fittings: Reinforced Plastic and Brass

Flow Chart AP 2-Way Circuit "Added Head Loss", DS (for "V" below 2 m/s; 6.5 f/s): 0.3 bar; 4.5 psi 1.0 12.5 10.0 0.8

qpr

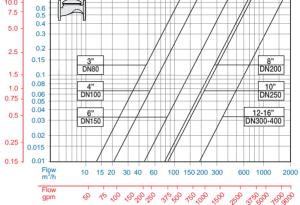


[3] Operation [2] [P1]

The Needle Valve [1] continuously allows line pressure into the Control Chamber [2]. The Pressure Sustaining Pilot [3] senses Upstream Pressure [P1], and throttles when it drops below setting*. Pressure then accumulates in the control chamber causing the Valve to throttle closed maintaining [P1] at pilot setting, and eventually closing drip-tight. The pilot releases accumulated pressure when [P1] rises above setting, thereby causing the Valve to modulate open.

* Sustaining (In-Line) Valve Pilot should be set to minimum system pressure allowed. Relief (Circulation) Valve Pilot should be set slightly above system working pressure.

How to Order

Please specify the requested valve in the following sequence: (for more options, refer to Ordering Guide.)

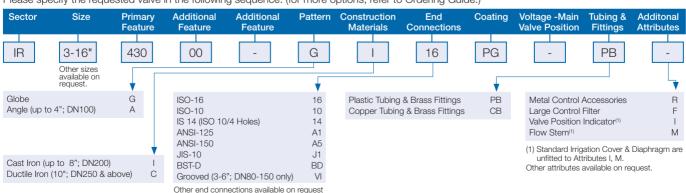



The information herein is subject to change without notice. BERMAD shall not be held liable for any errors. All rights reserved. © Copyright by BERMAD. PC4AE30-R 05



Relief/Sustaining