

Pressure Relief/Sustaining Valve

Description

The Model 730 Pressure Relief/Sustaining Valve is a hydraulically operated, diaphragm actuated control valve that can fulfill either of two separate functions:

- When installed in-line, it sustains minimum pre-set, upstream (back) pressure regardless of fluctuating demand or varying downstream pressure.
- When installed as a circulation valve, it relieves excessive line-pressure that is above maximum pre-set.

Installation

1. Ensure enough space around the valve assembly for future maintenance and adjustments.
2. Prior to valve installation, flush the pipeline to insure flow of clean fluid through the valve.
3. For future maintenance, install Isolation gate valves upstream and downstream from Bermad control valve.
4. Install the valve in the pipeline with the valve flow direction arrow in the actual flow direction. Use the lifting rings provided on the main valve cover for installing the valve.
5. Install the valve horizontally and upright.
6. After installation carefully inspect/correct any damaged accessories, piping, tubing, or fittings.
7. Install a pressure gauge (instead of the plastic plug on the pilot).
8. It is recommended to install a strainer upstream from the 730, to prevent debris from damaging valve operation.
9. For Remote Sensing Pressure Relief/Sustaining Valve model 730-R:
Prepare a 1/2" female threaded sensing port, including a cock-valve, at the point where pressure sustaining is required & pull a 3/8" or 1/2" sensing tube to the valve. Ensure tube protection by a sleeve or by a covered cable-canal. Apply a fixed effective tube route.


Commissioning & Calibration

1. Confirm that cock valves [1], [2] & [3] are open (handle parallel to cock-valve body).
2. Open fully the upstream isolating valve and partially the downstream isolating valve, to fill-up, in a slow and controlled manner, the consumers line downstream from the pressure sustaining valve.
Note: When upstream pressure is below the 730 setting, the valve is closed.
3. Confirm that the supply pressure and the flow through the system are typical.
4. Vent air from the valve's control loop by opening cock valve [3V].
5. The Model 730 is factory set according to design definitions. The set pressure is marked on the pilot's label.
6. If the set pressure is either different from the design or the requirements have been changed follow the steps described below:
 - 6.1. 730 @ In-Line Installation:
 - 6.1.1. Close the upstream isolating valve to reduce 730 inlet pressure. Ensure that the 730 sustains the upstream pressure, preventing it from decreasing below setting, even when the upstream isolating valve is almost closed.
 - 6.1.2. Unlock the pilot locking nut and slowly turn the pilot adjusting screw Clock-Wise to increase set pressure and Counter-Clock-Wise to decrease it.
 - 6.1.3. After the pressure is stabilized, lock the pilot locking nut and open fully the upstream isolating valve.
 - 6.2. 730 @ Off-Line (Circulation) Installation:
 - 6.2.1. Confirm that the line pressure is the designed dynamic operating pressure.
Note: When setting is below the designed dynamic operating pressure, the valve is partially/fully open.
 - 6.2.2. Unlock pilot locking nut & slowly turn the adjusting screw Clock-Wise until the valve close & seal.
 - 6.2.3. Slowly turn the pilot adjusting screw Counter-Clock-Wise until the valve starts leaking, re-tighten the setting screw until the 730 seals again plus 1/4 – 1/2 turn and lock the locking nut
7. Needle valve (5) is factory set.
 - 7.1. To decrease closing speed turn the needle valve CCW
 - 7.2. To increase closing speed turn the needle valve CW

Control Drawing

PARTS LIST

1	2W Cock Valve
2	2W Cock Valve
3	2W Cock Valve
4	Control Filter
5	Needle Valve
#3HC-R	2W P.S. High Capacity Pilot

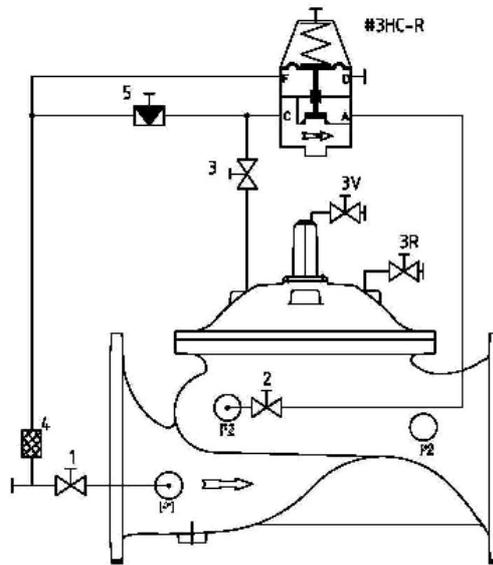

Trouble-Shooting

- Valve fails to Open:** Check for sufficient inlet pressure, create demand/flow, confirm pilot setting & check cock valves status.
- Valve fails to Close:** Create demand/flow, confirm pilot setting, check cock valves status, clean control filter & detect for clogged ports or fittings, check if any debris trapped in the main valve, confirm diaphragm is not leaking.
- Valve fails to Regulate:** Confirm pilot setting, release air trapped in the control chamber & check cock valves status.

Preventative Maintenance

- System operating conditions that effect on the valve should be checked periodically to determent the required preventative maintenance schedule.
- Maintenance instructions:
 - Tools required:
 - Metric and imperial wrenches
 - Anti seize grease
 - Visual inspection to locate leaks and external damages
 - Functional inspection including: closing, opening and regulation.
 - Close upstream and downstream isolating valves (and external operating pressure when used).
 - Once the valve is fully isolated vent pressure from the body and cover by loosening a plug or a fitting.
 - Open the stud nuts and remove the actuator as one unit from the valve body. Disassemble necessary control tubs.
 - Disassemble the actuator and examine its parts carefully for signs of wear, corrosion, or any other abnormal conditions.
 - Replace worn parts and all the Elastomers. Lubricate the bolts and studs threads with Anti seize grease.

Spare parts

Bermad has a convenient and easy to use ordering guide for valve spare-parts and control system components. For solenoid valves refer to model and S/N on solenoid tags.

Pub # : IOMEW730M5

By: RL 12/13

Rev: 01RL-12/13

File name: IOMEW730M5_12_13

appliceng@bermad.com • www.bermad.com

The information contained in this document is subject to change without notice.

BERMAD shall not be liable for any errors contained herein. All Rights Reserved. © Copyright by BERMAD Control Valves.

