


## Pressure Sustaining Valve

(Sizes 1.5"- 4"; DN40-100)

### Description:

The BERMAD Pressure Sustaining Valve is a hydraulically Operated, diaphragm actuated control valve that sustains Minimum preset upstream (back) pressure and opens fully When line pressure is in excess of setting.

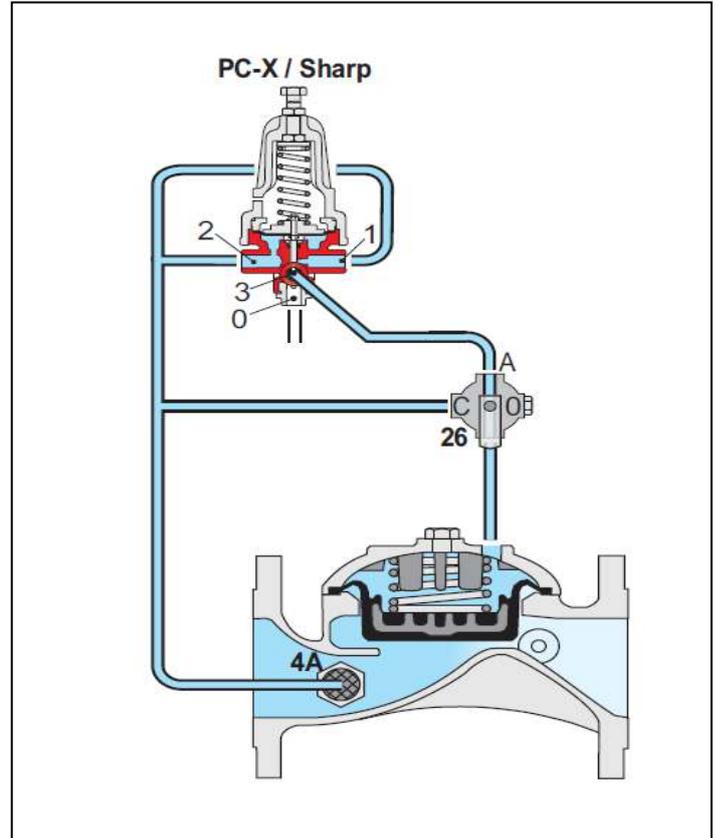

### Installation:

1. Ensure enough space around the valve assembly for future maintenance and adjustments.
2. Prior to valve installation, flush the pipeline to insure flow of clean fluid through the valve.
3. For future maintenance, install Isolation gate valves upstream and downstream from Bermad control valve.
4. Install the valve in the pipeline with the valve flow direction arrow in the actual flow direction.
5. For best performance, it is recommended to install the valve horizontally and upright.
6. After installation carefully inspect/correct any damaged accessories, piping, tubing, or fittings.

### Commissioning & Calibration:

1. Confirm that the In-line filter (4A) arrow direction is in the valve flow direction.
2. Confirm that Cock valve (26) handle is turn to AUTO.
3. Open fully the upstream isolating valve and slowly open the downstream isolating valve, to fill-up, carefully, the consumers' line downstream from the Valve.  
**Note:** When upstream pressure is below the 430-RXZ setting, the valve is closed.
4. Vent air from the valve's control loop by loosening cover tube fitting at the highest point, allowing all air to bleed. Then Retighten the tube fitting.
5. The Model 430-RXZ is factory set according to design definitions. The set pressure is marked on the pilot label.
6. If the set pressure is either different from the design or the requirements have been changed follow the steps described below:
  - 6.1. Close the upstream isolating valve to reduce 430-RXZ inlet pressure. Ensure that the 430-RXZ sustains the upstream pressure, preventing it from decreasing below setting, even when the upstream isolating valve is almost closed.
  - 6.2. Unlock the pilot locking nut and slowly turn the pilot adjusting screw Clock-Wise to increase set pressure and Counter-Clock-Wise to decrease it.
  - 6.3. After the pressure is stabilized, lock the pilot locking nut and open fully the upstream isolating valve.

## Trouble-Shooting:

Symptoms	Cause	Remedy
<b>Valve fails to open</b>	<ol style="list-style-type: none"> <li>1. Cock valve (26) is closed.</li> <li>2. Not sufficient inlet pressure.</li> <li>3. Not sufficient flow.</li> <li>4. Adjusting screws.</li> </ol>	<ol style="list-style-type: none"> <li>1. Confirm that the cock valve handle is turn to auto.</li> <li>2. Check for sufficient inlet pressure-</li> <li>3. Create demand/flow, confirm pilot setting-</li> <li>4. Check t the Pilot adjusting screw setting</li> </ol>
<b>Valve fails to close</b>	<ol style="list-style-type: none"> <li>1. Cock valve status.</li> <li>2. Adjusting screw..</li> <li>3. Control circuit is clogged.</li> <li>4. Debris-</li> <li>5. Diaphragm-</li> </ol>	<ol style="list-style-type: none"> <li>1. Confirm that the cock valve is turn to close.</li> <li>2. Check t the Pilot adjusting screw setting.</li> <li>3. Check for any debris trapped in the valve control circuit.</li> <li>4. Check for any debris trapped in the valve body.</li> <li>5. Check diaphragm is not leaking-</li> </ol>
<b>Valve fails to regulate</b>	<ol style="list-style-type: none"> <li>1. Not sufficient inlet pressure.</li> <li>2. Not sufficient flow.</li> <li>3. Pilots setting-</li> <li>4. Cock valve(26) status</li> <li>5. Air trapped in the control-chamber-</li> </ol>	<ol style="list-style-type: none"> <li>1. Check for sufficient inlet pressure.</li> <li>2. Create demand/flow.</li> <li>3. Check Pilot setting-</li> <li>4. Confirm that the cock valve handle is turn to auto.</li> <li>5. Release air trapped in the control chamber by loosening cover tube fitting at the highest point.</li> </ol>

## Preventive Maintenance:

1. System operating conditions that effect on the valve should be checked periodically to determent the required preventative maintenance schedule.
2. Maintenance instructions:
  - 2.1. Tools required:
    - 2.1.1. Metric and imperial wrenches
    - 2.1.2. Anti-seize grease
    - 2.1.3. Visual inspection to locate leaks and external damages
  - 2.2. Functional inspection including: closing, opening and regulation.
  - 2.3. Close upstream and downstream isolating valves (and external operating pressure when used)
  - 2.4. Once the valve is fully isolated vent pressure by loosening a plug or a fitting.
  - 2.5. Open the screw nuts and remove the cover unit from the valve body. Disassemble necessary control tubs.
  - 2.6. It is highly recommended to stock a reserve parts assembly for each size. This allows minimum system field work. And system down time.
  - 2.7. Disassemble the cover and examine the inside parts carefully for signs of wear, corrosion, or any other abnormal conditions.
  - 2.8. Replace worn parts and all the Elastomers. Lubricate the bolts and screws threads with Anti seize grease.
  - 2.9. Winterizing /freezing prevention: drain the valve & the valve accessories (pilot, solenoid) on time.

## Spare Parts

Bermad has a convenient and easy to use ordering guide for valve spare-parts and control system components. For solenoid valves refer to model and S/N on solenoid tags.

Pub # : IOMIR-430-RXZ-1.5" 4"	By : YG 8/12	Rev: YG 8/12	File name : IOMIR-430-RXZ-1.5"-4"- 8/12	PT1AE08-01
-------------------------------	--------------	--------------	---	------------